

## ASSEMBLING INSTRUCTION


### WINDSHIELD KAWASAKI Z900 (20-23)

KN9300-20

WWW.BARRACUDAMOTO.COM

## LEGEND

- |  |  |  |
|--|--|--|
| 1. MOTORCYCLE BRACKET<br>STAFFA MOTOCICLETTA<br>SOPORTE DE MOTOCICLETA<br>MOTORRADHALTERUNG<br>SUPPORT DE MOTO | 4. RUBBER WASHERS<br>RONDELLA GOMMA<br>ARANDELAS DE CAUCHO<br>GUMMISCHEIBE<br>RONDELLE EN CAOUTCHOUC             | 7. ALLEN SCREW M5X14<br>VITE A BRUGOLA M5X14<br>TORNILLO ALLEN M5X14<br>INBUSSCHRAUBE M5X14<br>VIS ALLEN M5X14 |
| 2. ALLEN SCREW M5X25<br>VITE A BRUGOLA M5X25<br>TORNILLO ALLEN M5X25<br>INBUSSCHRAUBE M5X25<br>VIS ALLEN M5X25 | 5. THREADED THICKNESSES<br>SPESSORE FILETTATO<br>ESPACIADOR ROSCADO<br>GEWINDE ABSTAND<br>ESPACEUR FILETÉ        |  |
| 3. WASHERS Ø5<br>RONDELLA Ø5<br>ARANDELAS Ø5<br>SCHEIBE Ø5<br>RONDELLE Ø5                                      | 6. TEFLON WASHERS M5<br>RONDELLA TEFLON M5<br>ARANDELAS DE TEFLON M5<br>TEFLONSCHIBE M5<br>RONDELLE EN TÉFLON M5 |  |

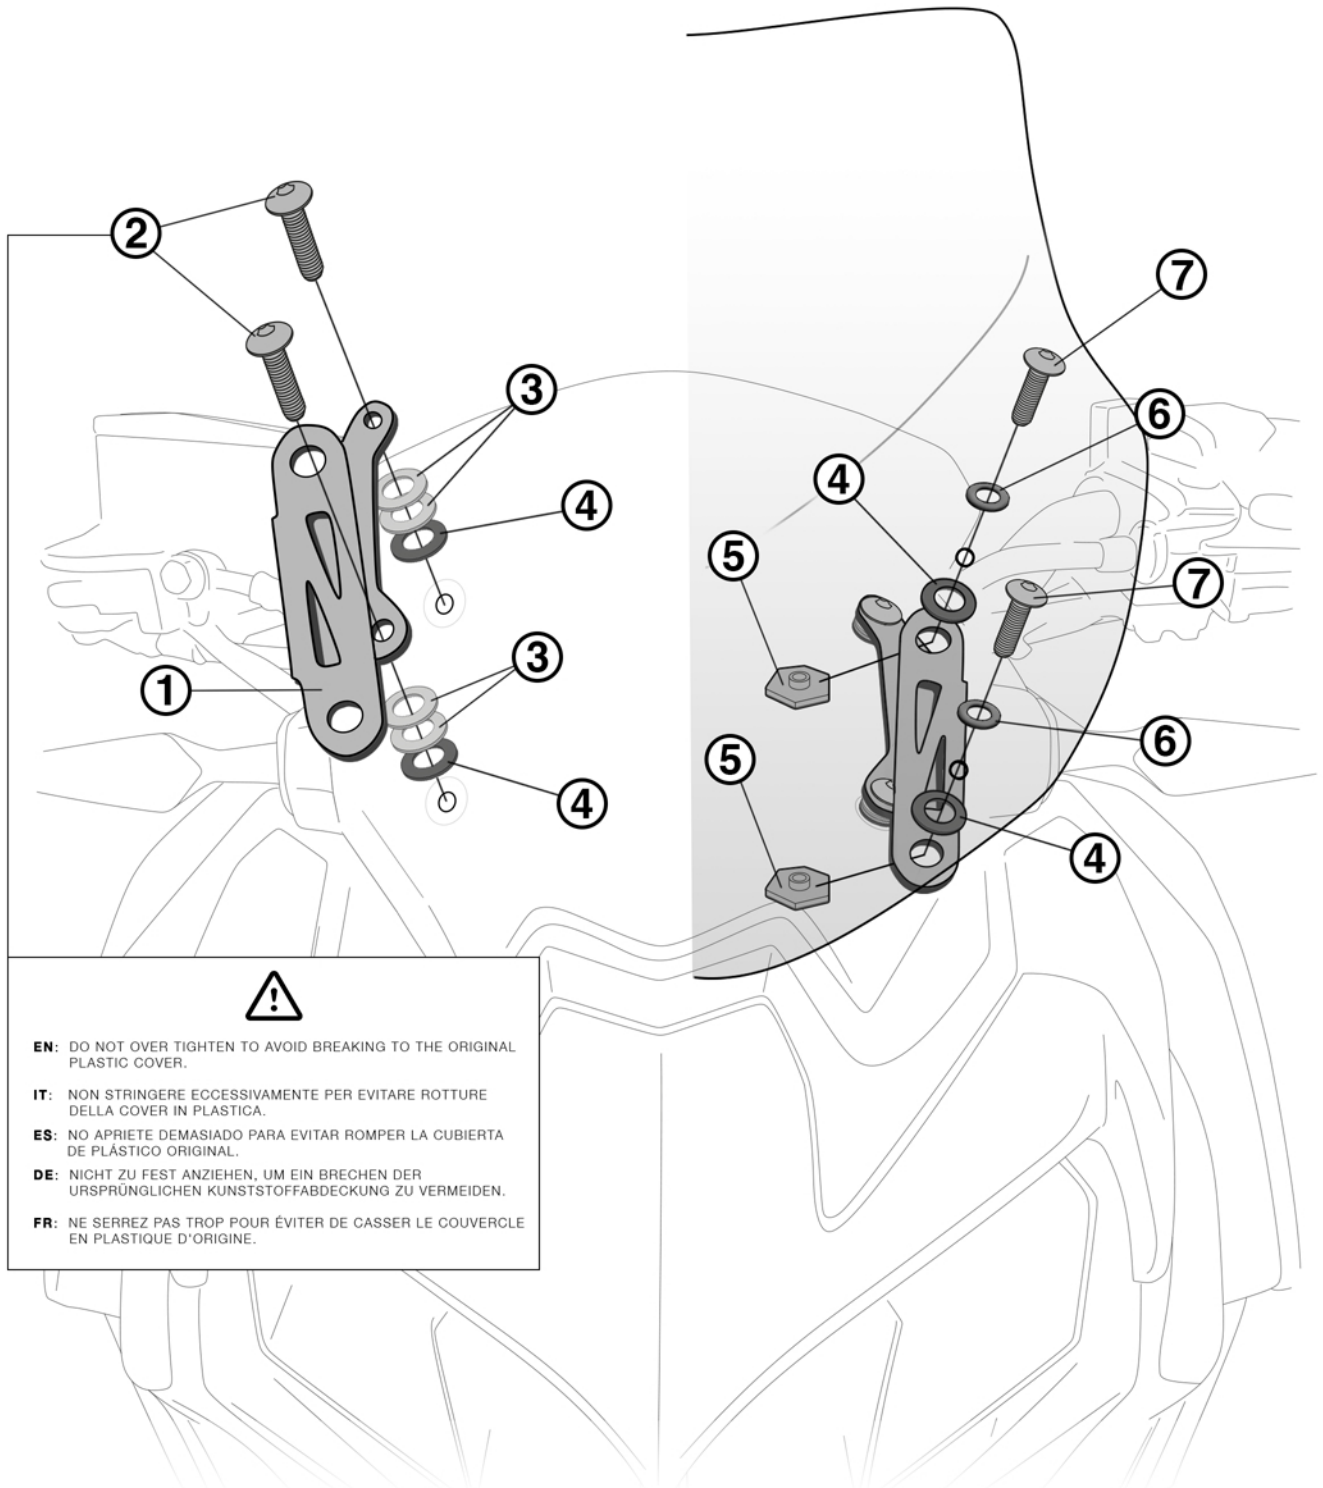

**EN:** DO NOT OVER TIGHTEN TO AVOID BREAKING TO THE ORIGINAL PLASTIC COVER.

**IT:** NON STRINGERE ECCESSIVAMENTE PER EVITARE ROTTURE DELLA COVER IN PLASTICA.

**ES:** NO APRIETE DEMASIADO PARA EVITAR ROMPER LA CUBIERTA DE PLÁSTICO ORIGINAL.

**DE:** NICHT ZU FEST ANZIEHEN, UM EIN BRECHEN DER URSPRÜNGLICHEN KUNSTSTOFFABDECKUNG ZU VERMEIDEN.

**FR:** NE SERREZ PAS TROP POUR ÉVITER DE CASSER LE COUVERCLE EN PLASTIQUE D'ORIGINE.