

ASSEMBLING INSTRUCTION


NUMBER PLATE YAMAHA MT-09 (21-22)

YMT9400-21

WWW.BARRACUDAMOTO.COM

LEGEND

- | | | |
|---|---|--|
| <p>1. LARGE WASHERS Ø8
RONDELLA LARGA Ø8
ARANDELA ANCHA Ø8
BREIT SCHEIBE Ø8
RONDELLE LARGE Ø8</p> <p>2. BRACKET
STAFFA
SOPORTE
HALTERUNG
SUPPORT</p> <p>3. SPECIFIC THICKNESS H17.5 mm
SPESSORE SPECIFICO H17.5 mm
ESPACIADOR H17.5 mm
ABSTANDHALTER H17.5 mm
ESPACEUR H17.5 mm</p> | <p>4. COUNTERSUNK ALLEN M8X15
VITE A TESTA SVASATA M8X15
TORNILLO AVELLANADO M8X15
COUNTERSUNK-SCHRAUBE M8X15
VIS FRAISEE M8X15</p> <p>5. SELF-LOCKING NUT Ø8
DADO AUTOBLOCCANTE Ø8
TUERCA AUTOBLOCCANTE Ø8
SELBSTSICHERNDE MUTTER Ø8
ECROU AUTOBLOQUANT Ø8</p> <p>6. COUNTERSUNK ALLEN M8X35
VITE A TESTA SVASATA M8X35
TORNILLO AVELLANADO M8X35
COUNTERSUNK-SCHRAUBE M8X35
VIS FRAISEE M8X35</p> | <p>7. NUMBER PLATE
TABELLA PORTANUMERO
SOPORTE PORTANUMERO
NUMMERNTAFEL
SUPPORT NUMERO</p> <p>8. NEOPRENE 20X20 mm
NEOPRENE 20X20 mm
NEOPREN 20X20 mm
NEOPREN 20X20 mm
NEOPRENE 20X20 mm</p> |
|---|---|--|

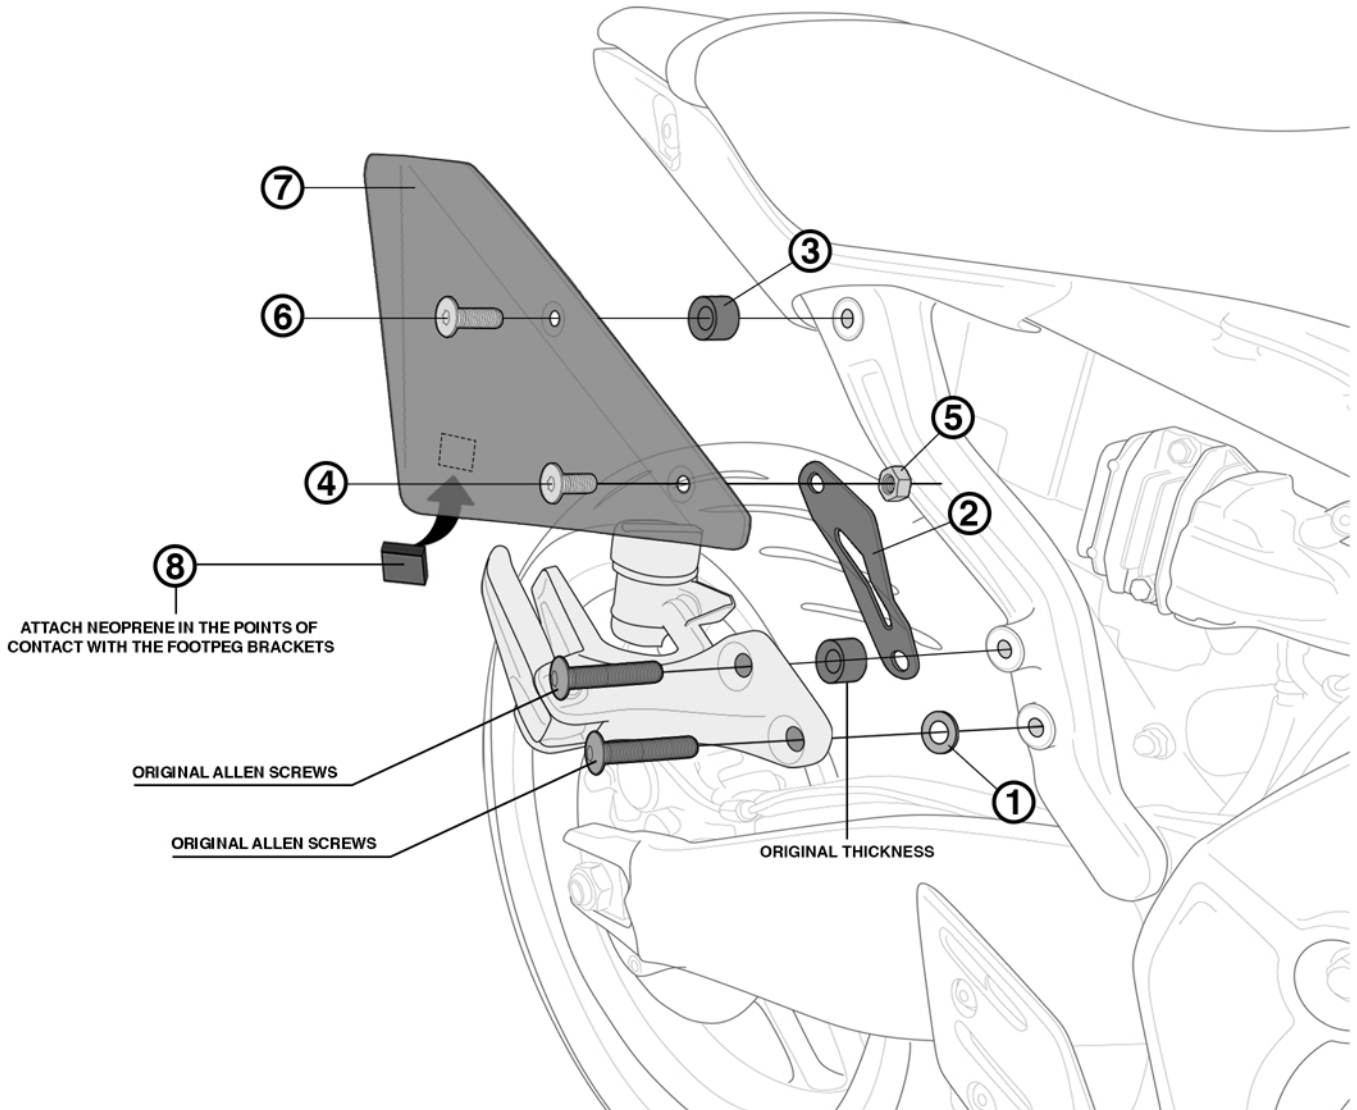

- EN:** ATTACH THE STICKER AFTER TIGHTENING THE BRACKET SCREWS
- IT:** ATTACCARE L'ADESIVO DOPO AVER STRETTO LE BRUGOLE DELLA STAFFA
- ES:** APLICAR EL ADHESIVO DESPUÉS DE APRETAR LOS TORNILLOS DEL SOPORTE
- DE:** TRAGEN SIE DEN KLEBER NACH DEM ANZIEHEN DER BEFESTIGUNGSSCHRAUBEN AUF
- FR:** APPLIQUER L'ADHÉSIF APRÈS AVOIR SERRÉ LES VIS DU SUPPORT

BARRACUDA

Cod. HY7400-21
Descr. SIDE STICKER

APPLYING YOUR DECAL

1. Clean <small>Cleaning with isopropyl alcohol (90% or higher) before application.</small>	2. Align <small>Align the decal to the number plate.</small>	3. Apply <small>Apply the decal with your fingers, starting from the top and smoothing out any air bubbles.</small>	4. Heat <small>Use a heat gun to heat the decal and ensure it adheres properly to the surface.</small>
--	---	--	---